

New
Improved

flexidisc[®]
conforming to customer demands



Reasons to Buy

Lasts Longer ..

- **NEW** improved Flexdisc[®] lasts up to 2 times longer than the original flexidisc[®].

Proven Sales Success - Flexidisc[®] V Resin Fibre Discs.

- Flexidisc[®] offers maximum flexibility compared to resin fiber discs.
- The unique flap construction provides significantly longer disc life compared to resin fibre discs.



Product & Cloth Comparison

Test Results



Test Procedure

Test Conditions

Manual

Material

Mild Steel Bar (Circular Solid) 70x150mm long

Method

High attack angle (so as to use the flexible part of the disc along the length of the bar)


End Results

The disc was used to grind on the same section of the bar, which consequently meant that the bar finished with a flat section ground into it.


The test was finished, when the disc was perceived to have stopped working in a flexible manner

Cumulative Stock Removed

FLXZ115060 Manual Test on Mild Steel.

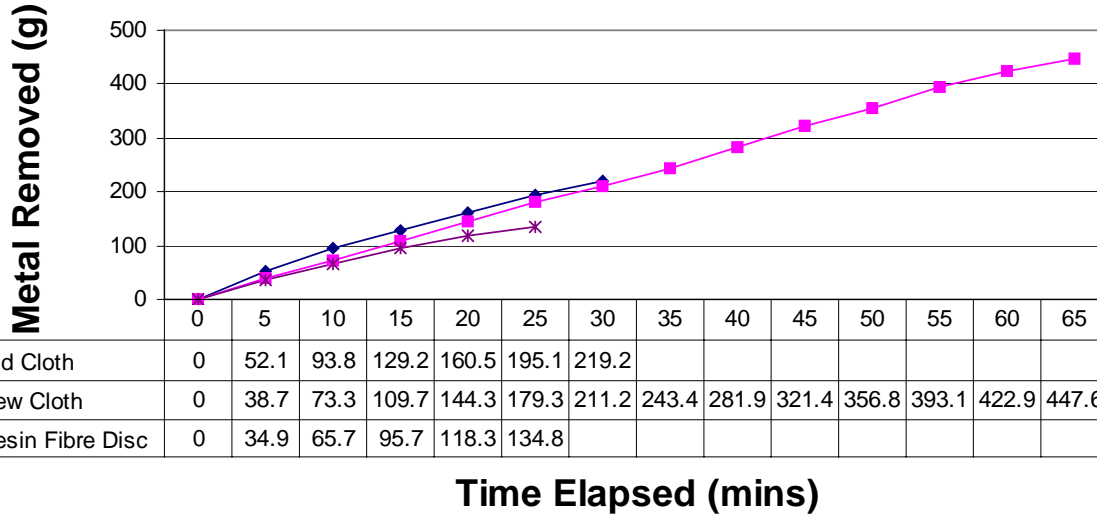

Metal Removal Rate (gms/min)

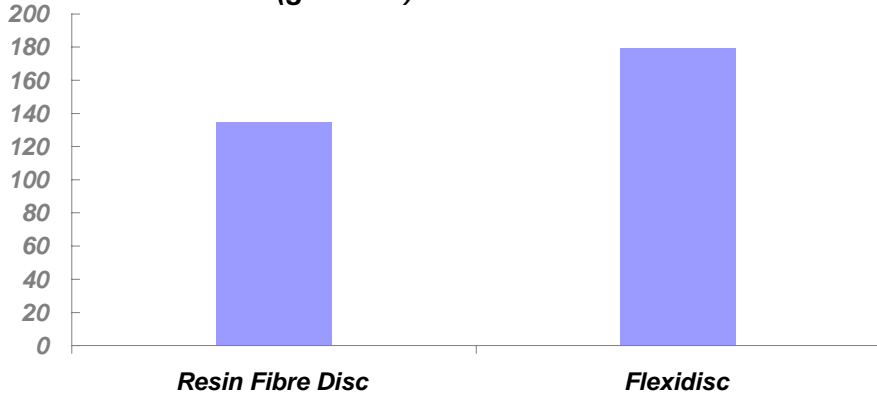

Cumulative Stock Removal FLX115060 Manual Test on Mild Steel

